## CENTRAL PACIFIC PLAZA BASEMENT LAYOUT

- ALL numbered stalls are reserved parking only.
- The loading area is for Delivery personnel, building contractors, and tenant contractors with oversized vehicles only.
- A maximum time of fifteen (15) minutes will be allowed in the Loading Area for active loading/unloading only and parker must sign in with Security.
- Any tenant/guests must have prior, written approval from Building Management for basement parking.
- Tenant requests for guest parking in their reserved stalls must have prior written notification and be approved by management.

	- Tenant requests for guest parking in their reserved stalls must have prior written notification and be approved by management.				
Electrical Room		CONTROL	EIGHT VATORS & #6		MAINTENANCE SHOP
#29					#10
#30		NO PA	ARKING		#10
#30		LOAD	ING AREA		#9
#31		LOAD	INO AREA		
#32		#26	#14		#8
		#25	#15		#7
#33					
#34		#24	#16		#6
		#23	#17		#5
#35					
		#22	#18		#4
Trash and Compactor Room		#21	#19		#3
			#20		#2